

## CHAPTER 5

### 5. SPREADSHEET TOOL

This chapter belongs to the activities under task 7 of the project. A spreadsheet tool was developed to help signal operation personnel understand how the relative risk (RR) of left turn crashes varies during the day as turning movement counts vary. This spreadsheet tool embeds the statistical models described in Chapter 4 for different types of intersection approaches. It takes the geometric measurements and turning movement counts as input from the user and produces 24-hour RR diagrams.

#### 5.1 Spreadsheet Tool

The spreadsheet tool has 3 main parts:


- SD condition: the first sheet
- RR diagrams: the second sheet
- Supporting data: the last three sheets

All input cells are highlighted green. Users, normally, do not need to change any other cells.

##### 5.1.1 SD Condition

The first step of using the spreadsheet tool is to determine whether or not the intersection approach of interest has a sight distance issue. Figure 5.1 shows the contents of sheet “SD issue” which is used for this purpose. The procedure starts with a question regarding the existence of opposing LT movement. If the answer to this question is no, the approach does not have a SD problem. No further calculations are needed and user can move forward to the RR sheet. Otherwise, a set of input variables (the green list) is needed in order to calculate required SD (RSD) and available SD (ASD). The first two variables are used to calculate the RSD and the rest of them are needed for ASD. All these variables are shown in the diagram. However, there are considerations regarding some of these variables.

The number of opposing lanes is the number of lanes that a left-turning vehicle has to cross to complete a left-turn maneuver, including the right-turn lane unless the right turn lane is channelized as a free right turn. In other word, those lanes to which the LT vehicle must yield.

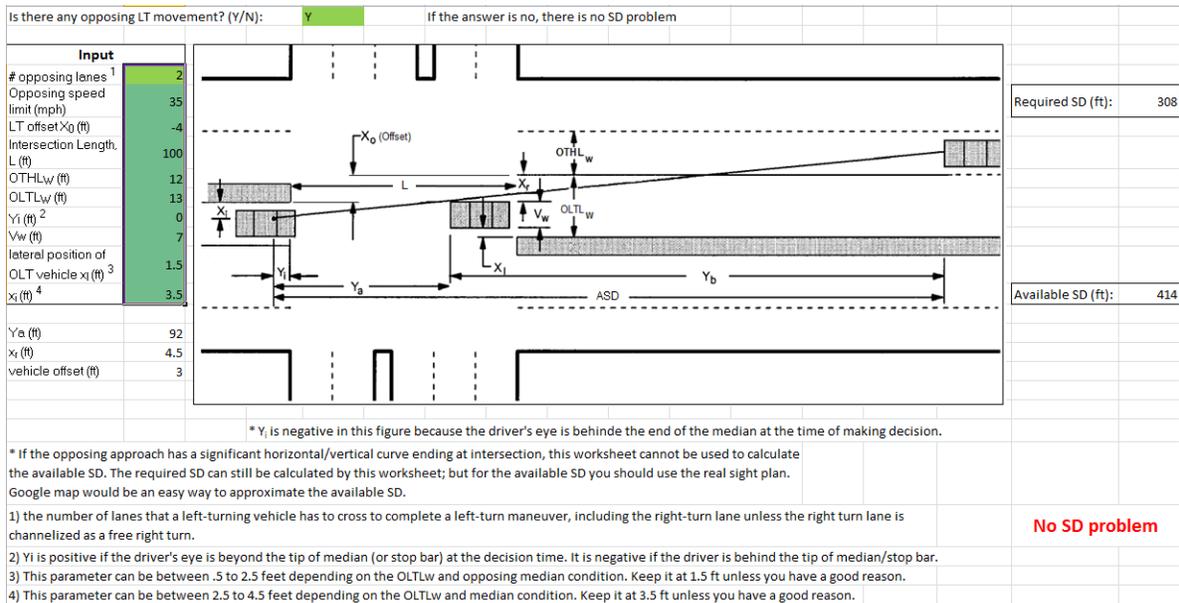

**Figure 5.1 Contents of the “SD issue” sheet**

$Y_i$  is the longitudinal distance from the tip of the median (or stop bar) to the driver’s eye; positive if inside the intersection and negative if behind the intersection. For majority of intersections  $Y_i$  can be considered zero, meaning that the driver’s eye is just at the start of the intersection (either end of median or stop bar). At some intersections, though, drivers may advance into the intersection while waiting for an adequate gap. At these situations a reasonable positive value for this variable should be considered. Eastbound and westbound approaches of the intersection shown in Figure 5.2 are examples of such situations ( $Y_i \approx 20$  feet would be reasonable for these two approaches).

$V_w$  is the width of the design vehicle that can always be fixed at 7 feet, unless the user has a good reason for taking a different value.

$X_1$  is the lateral distance of the left edge of the opposing left-turn vehicle from the left lane strip. This variable is usually between .5 to 2.5 feet depending on the opposing left-turn lane width (OLTL<sub>w</sub>) and the opposing median condition. User should keep it at 1.5 feet unless s/he has a good reason.

$X_i$  is the lateral position of driver’s eye from the left lane strip. This variable is usually between 2.5 to 4.5 feet depending on the left-turn lane width and median condition. User should keep it at 3.5 feet unless s/he has a good reason.

Important note: the reference point for measuring OLTL<sub>w</sub>,  $X_1$ , and  $X_i$  is the lane strip and not the edge of median.

If  $RSD > ASD$ , there is a potential SD problem.



**Figure 5.2 Eastbound and westbound approaches: typical locations at which  $Y_i > 0$**

### **5.1.2 RR Diagrams**

The spreadsheet tool, currently, serves to three types of intersection approaches, all with protected/permitted LT signals:

1. Low speed (<45 mph), no sight distance problem
2. Low speed (<45 mph), with sight distance problem
3. High speed ( $\geq 45$  mph), with sight distance problem

Based on the user input information in the “SD issue” sheet, the tool identifies the intersection type and applies the respective coefficients. If a high speed approach with no sight distance problem was identified, the user will be notified that the research was not conclusive for this approach type and this tool cannot at present be used. Figure 5.3 shows the contents of the RR sheet. Following sections are recognizable:

1. Model parameters: RR beta coefficients which were estimated in Chapter 4 for each approach type. This should not be edited by the user; so they are locked to prevent inadvertent changes.
2. Base condition: The reference turning movement volumes for RR calculations. Higher base volumes result in lower RR and vice versa.
3. Available turning movement counts: Enter the available turning movement counts for the desired approach (in Figure 5.3, for example, these were available for the hours ending at 7, 8, and 9 AM, 12, 1, 4, 5, and 6 PM). If a count is not available for an hour leave that cell blank.

Important note: The opposing volume means the conflicting volumes including those movements to which a left-turn vehicle must yield. So, it usually means through + right turns and occasionally means only through movement. The latter case happens where right turn is channelized by a traffic island and is no longer a conflicting turning movement.

